



VOLVO C70 **QUICK GUIDE**



WELCOME TO YOUR NEW VOLVO!

Getting to know your car is an exciting experience.

Browsing through this Quick Guide will further enhance your approval of your new Volvo. The detailed information is in the Owner's Manual.

Warning texts and other important information is only in the Owner's Manual, not in this folder. The Owner's Manual contains the most important information.

Options are marked with an asterisk (*).

KEY & REMOTE CONTROL



KEY BLADE

Used to lock/unlock the glovebox or driver's door/cargo area, e.g. if car is without electrical power.

1. Automatic relocking takes place if a door/boot lid is not opened within 2 minutes after unlocking.
2. The time is adjustable to 30, 60 or 90 seconds, see Owner's Manual.



Locks doors, storage compartment in doors*, boot lid and ski hatch and arms the alarm. After 30 seconds the doors are double-locked and cannot be opened from inside.



Unlocks doors, storage compartment in doors*, boot lid, ski hatch and steering lock and disarms the alarm ¹.



Unlocks boot lid. (Boot lid does not open.)



Switches on lighting for 30 seconds ² in side mirrors*, in cabin, by feet and on number plate. Indicators and parking lamps illuminate.



"Panic" button. Press and hold for approx. 3 seconds in an emergency to trigger the alarm. Switch off the alarm with the unlock button.



Lock for emergency opening of boot lid.

COLD START



NOTE


The idling speed may briefly be slightly higher in order to achieve efficient emission control.

AUTOSTART (applies to 2.4, 2.4i, T5 and D5)

Turn the ignition key/dial to position **III** and release. The engine starts automatically.

Diesel engines must always be preheated in position **II** before the engine is started.

CONTROL PANEL IN DRIVER'S DOOR

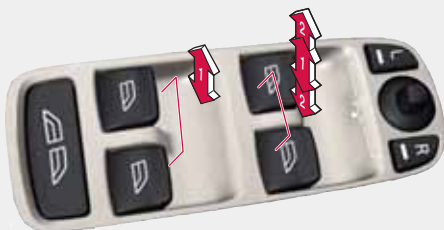

WINDOW AUTOMATION

The windows are automatically opened approx. 2 cm when doors are opened/roof is operated. The windows are closed automatically.

L R

Adjusting the door mirrors, select **L** or **R**. Set with the lever.



Retracting the door mirrors*. Press **L** and **R** simultaneously. Press again to extend.

1

Manual windows

2

Automatic windows



All windows open simultaneously with one press on the right of the button. Press and hold on the left to close.

LIGHT SWITCHES



Headlamp levelling (automatic for Bi-Xenon lights*)



Automatic dipped beam. Main beam flash. Main beam cannot be activated.



Parking lamps



Dipped beam. Dipped beam switches off when the ignition is switched off. Main beam can be activated.



Display & instrument lighting



Front fog lamps*



Rear fog lamp (one rear lamp)



Main beam flash



Main/dipped beam switching. Approach lighting.




DIRECTION INDICATORS




A. Short sequence, **three flashes**.
B. **Continuous** flash sequence.

ADJUSTING THE STEERING WHEEL

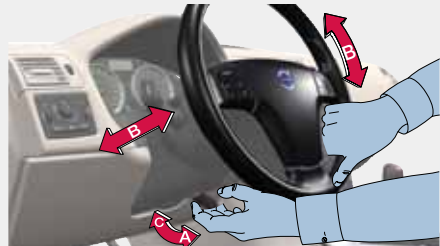

WARNING! Adjust the steering wheel before setting off, never while driving.

RAIN SENSOR* AND WINDSCREEN WIPERS

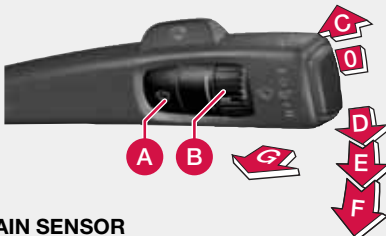

RAIN SENSOR

- A** Activates rain sensor. Position D–F deactivates rain sensor.
- B** Adjust sensitivity using the thumbwheel.
- G** Display symbol for rain sensor On.

WINDSCREEN WIPERS

- G** Single sweep
- 0** Off
- D** Intermittent wiping. Turn (B) to adjust.
- E** Normal speed
- F** High speed
- G** Windscreen and headlamp washing

OPERATING THE ROOF "TOP DOWN & TOP UP"



PREPARATIONS

- No objects on parcel shelf, roof or boot lid.
- 2 m clearance and 0.2 m behind.
- Level ground.
- Outside temperature above $-10\text{ }^{\circ}\text{C}$.
- Closed cargo separator and boot lid.
- The car must be stationary.
- Pay attention that no individual is close to the roof's moving parts during its operation.

The side windows lower several centimetres when the roof is operated. They then return automatically.

OPERATION



1. Engine at idling speed.
2. Depress the brake pedal.
3. Press and hold button (A) or (B) until a signal sounds and the message ROOF CLOSED/ ROOF OPEN is shown in the display.
4. Release the button.

CARGO SEPARATOR



The cargo separator limits the cargo area to make space for the folding roof.

1. Raise the cargo separator during loading.
2. Lower the cargo separator fully into the catches (3) before lowering the roof. See decal on cargo separator.

LOADING ASSISTANCE



Raise/lower the lowered roof to facilitate loading.

- Press the button and wait several seconds until the roof is raised. Raise the cargo separator, load, and then fold it down fully.
- Press the button again to lower.

ELECTRONIC CLIMATE CONTROL, ECC*








AUTOMATIC CONTROL

In **AUTO** mode the ECC system controls all functions automatically making driving simpler with optimum air quality.

1 Automatic
Press **AUTO** for automatic control of temperature and other functions.

2 Temperature
Press for individual adjustment of left (L) or right-hand (R) side. Turn to the required temperature. The set temperature is shown in the display.

MANUAL CONTROL

-  **Fan speed**
-  **Air distribution**
-  **Defroster** to quickly remove misting from the windscreen and side windows.
-  **Air quality system*** On (A).
Recirculation On (M).
- AC** **Air conditioning** On/Off
-  **Rear window** and door mirror defrosters. Automatic deactivation ¹.

1. Rear window 12 minutes. Mirrors 6 minutes.

PACOS, DEACTIVATING THE AIRBAG*





WARNING

Incorrect use can endanger life. Consult the Owner's Manual in the event of the smallest uncertainty regarding usage.

PACOS (Passenger Airbag Cut Off Switch)

Use the ignition key to switch **ON/OFF**.

 **ON: The airbag is activated.**
Passengers taller than 140 cm can sit in the front seat but **never a child on a booster cushion or child seat.**

 **OFF: The airbag is deactivated.**
PASSENGER AIRBAG OFF is shown in the warning lamp above the interior rearview mirror.

A child can sit on a booster cushion or child seat in the front seat but **never passengers taller than 140 cm.**

TRIP COMPUTER AND TRIP METERS



FUEL

- 1 Low fuel level**
8 litres petrol (7 litres diesel) remain.
- 2 Fuel gauge.** The arrow indicates that the fuel cap is on the right-hand side.

TRIP METERS

- 4 Display** shows two independent trip meters, T1 & T2.
- 3 Switch between T1 & T2** with one short press. Reset current meter with one long press.

CLOCK

- 5 Turn to stop** and hold to set the clock (6).

TRIP COMPUTER



- 8 Press** to clear a message.
- 9 Turn** to show e.g. RANGE TO EMPTY FUEL TANK in the display (7).
- 10 Reset** current function. One long press resets all functions.

i IMPORTANT

RANGE TO EMPTY FUEL TANK is an estimate based on earlier driving conditions.

INDICATOR AND WARNING LAMPS



Read in information display



Stop safely. Rectify the fault as per information display.



Low oil pressure. Stop safely. Check the oil level ².



ABS fault. Stop safely. Restart the engine ¹.




Fault in brake system. Stop safely. Check the brake fluid ².



DSTC stability system. Flashes when the system is operating.

1. Contact a Volvo workshop if the symbol illuminates after restart. 2. Have the car towed if the symbol remains visible.

AUDIO SYSTEM

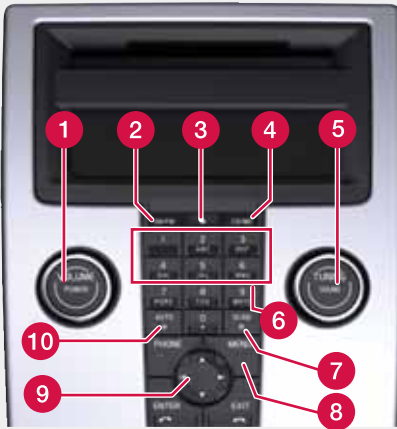

- 1 On/Off and audio volume.** Press for On/Off. Turn to adjust the audio volume. Radio, TP, handsfree* and RTI volume are stored individually.
- 2 FM1 , FM2 or AM** radio
- 4 CD** or **AUX** ¹
- 5 Sound pattern.** Press to select e.g. BASS, Dolby Pro Logic II* or SUBWOOFER*. Turn to adjust.
- 8 Activate/deactivate SUBWOOFER*** using **MENU**

RADIO

- 5 Select radio station** by turning.
- 9 Search for station** using Left/Right arrow or **SCAN** (7). **Store up to 20 stations** by holding in **0-9** on FM1 and **0-9** on FM2. When a station has been stored it is confirmed in the display.
- 10 Autostoring stations**
Press **AUTO** for approx. 2 seconds. Autostoring is shown in the display. The ten strongest stations are stored. Then press **0-9** to select a station..

CD PLAYER

- 9 Change CD track** using Left/Right arrow or turn (5).
Select CD disc² using Up/Down arrow.
- 3 Ejecting a CD disc.** One short press ejects the current disc. One long press ejects all ².
- 6 Direct selection CD disc².** Press **1-6**.

1. AUX input for e.g. MP3 player.
2. Only CD changer*.

CAR CARE

Washing by hand is gentler to the paintwork than an automatic car wash. The paintwork is also more sensitive when it is new. Handwashing is recommended during the first few months.

AUTOMATIC CAR WASH

Remove the antenna to use an automatic car wash. Turn the antenna anticlockwise to remove it.

REFUELLING



Open the fuel filler flap, hang up the fuel cap during refuelling.

DIESEL PARTICLE FILTER


Diesel cars are equipped with a particle filter, which results in more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving. So-called "regeneration" is started automatically in order to burn away the particles and empty the filter. Engine power may be slightly reduced during regeneration.

ADJUSTING THE FRONT SEAT



- 1 Lumber support
- 2 Backrest rake
- 3 Raise/lower seat
- 4 Seat cushion front edge raise/lower

5 Forwards/backwards

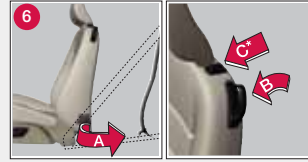

6 EASY ENTRY & BELT GUIDE

Manual seat

- A. Always remove the seatbelt from the belt-guide.
- B. Pull and move the seat forwards.

Power seat*

- A. Always remove the seatbelt from the belt-guide.
- B. Pull the handle and fold up the backrest.
- C. Hold the button in while the seat moves forwards. Hold the button in again to move the seat back.

STORAGE SPACES, 12 V SOCKET & AUX

12 V socket in centre console **front/rear** works in ignition position **I** or **II**. **12 V socket** on right-hand side in **cargo area** is always active.

Using the **AUX output** the car's audio system can playback music from an MP3 player etc.

i IMPORTANT

Using the 12 V socket in the cargo area when the engine is switched off can discharge the battery.

